FuzzyNet-

Online

Application Notes

APN04V20-0892

Introduction
Fuzzy Controller
Control Objective
Fuzzy Control System
Input/Output Variables of Dead Time Compensator
FIU Source Code of Dead Time Compensator
Input/Output Response of Dead Time Compensator
Input/Output Variables of Error Compensator
FIU Source Code of Error Compensator
Input/Output Response of Error Compensator
Comments

Glass Melting Furnace Temperature Control

INTRODUCTION

Temperature control is widely used in various processes. These processes, no matter if it is in a large industrial plant, or in a home appliance, share several unfavorable features. These include non-linearity, interference, dead time, and external disturbances, among others. Conventional approaches usually do not result in satisfactory temperature control.

In this Application Note we provide examples of fuzzy logic used to control temperature in several different situations. These examples are developed using FIDE, an integrated fuzzy inference development environment.

Back to Top

FUZZY CONTROLLER FOR GLASS MELTING FURNACE

A glass melting furnace has two rooms, a melter and a refiner. Raw materials are melted into glass at high temperature in the melter. The temperature of the melted glass is adjusted to a suitable temperature for the glass forming process to follow. It takes a long time to change the temperature in the furnace, which is an example of dead-time in this process. The flow of melted glass is not uniform, especially at the bottom of the furnace. In addition to temperature, other factors also contribute to the thermal characteristics of melted glass. Raw material mixing procedure, glass color, and the amount of the glass are some of the factors. Because there are many variables and the procedure complex, it is very difficult to design an effective temperature controller for this application using conventional control approaches.

Back to Top

Control Objective

Control temperature in a dead time process such as in a glass melting furnace.


Fuzzy Control System

The control block diagram for a glass melting furnace is shown in <u>Figure 1</u>. Control value u is applied to the process to adjust the temperature. This value is changed by two compensators. The variation of u can be written as

$$\Delta u = \Delta u_d + \Delta u_e$$

where Δu_d is the output of the dead time compensator, and Δu_e is the output of the error compensator. The dead time compensator is used to reduce the effect dead time has on the process. Its output (Δu_d) , an incremental change in control value, is derived from the change in the current and previous control value (Δu) and the time differential of output temperature (\acute{e}) . The error compensator is used to reduce the difference between the desired temperature and the actual temperature of the furnace. Its output (Δu_e) , also an incremental change in control value, is inferred from the difference(error) e and its time differential \acute{e} (actually the variation Δe is used). Δu_d and Δu_e are combined to change the control value u.

Figure 1 Fuzzy Control for a Glass Melting Furnace

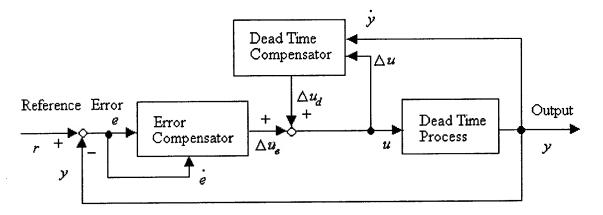

Back to Top

Input/Output Variables of the Dead Time Compensator

Labels and membership functions of input/output variables of the dead time compensator are shown in Figure 2a, 2b, 2c. The membership functions can be created by using the MF editor in FIDE.

Figure 2a Labels and Membership Functions of Input Variable Prev_Var_Ctrl

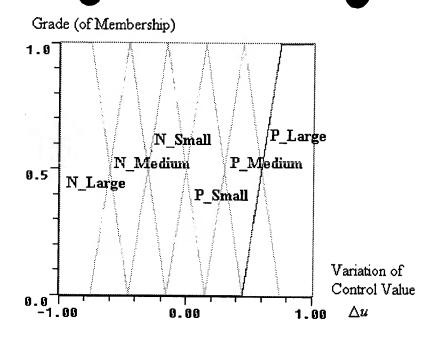


Figure 2b Labels and Membership Functions of Input Variable TimeDiff_Output


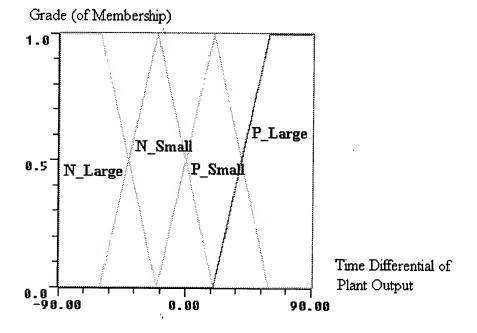


Figure 2c Labels and Membership Functions of Output Variable Var_Ctrl

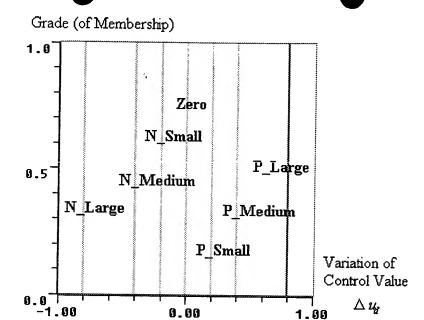

Back to Top

To FIU Source Code for the Dead Time Compensator

Input/Output Response of the Dead Time Compensator

Figure 3 shows the response surface of the dead time compensator. This surface can be obtained by using the Analyzer tool provided in FIDE.

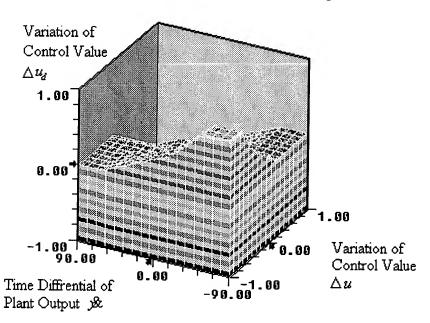


Figure 3 I/O Response of Dead Time Compensator

Back to Top

Input/Output Variables of the Error Compensator

Labels and membership functions of input/output variables of the Error Compensator are shown in <u>Figure 4a, 4b, 4c</u>.

Figure 4a Labels and Membership Functions of Input Variable Error

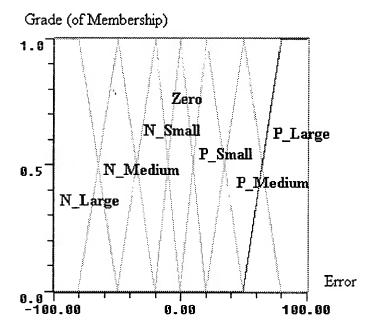


Figure 4b Labels and Membership Functions of Input Variable TimeDiff_Error


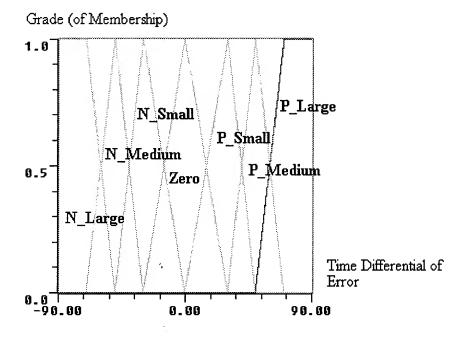


Figure 4c Labels and Membership Functions of Output Variable Var_Ctrl

5 of 7

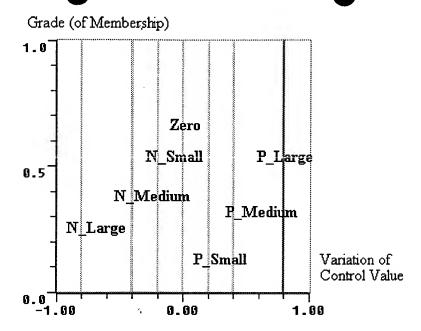


Back to Top

To FIU Source Code of Error Compensator

Input/Output Response of Error Compensator


Figure 5 shows the response surface of the error compensator.

Figure 5 I/O Response of Error Compensator

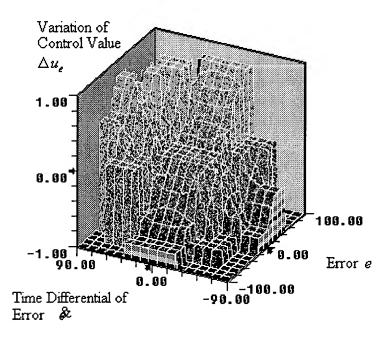

Back to Top

COMMENTS



Back to Top

For Further Information Please Contact:

Aptronix Incorporated 2040 Kington Place Santa Clara, CA 95051 Tel (408) 261-1898 Fax (408) 490-2729

FuzzyNet http://www.aptronix.com/fuzzynet
Email: fuzzynet@aptronix.com

Back to Home

Weijing Zhang, Applications Engineer. Copyright © 1992 by Aptronix Inc. Revised: October 21, 1996.

1		T			
	L Number	Hits	Search Text	DB	Time stamp
•	1.	47	65/29.11.ccls.	USPAT;	2001/03/19 13:30
				US-PGPUB;	
ļ				ЕРО; ЛРО;	
		-		DERWENT;	
- 1				IBM TDB	
İ	2 .	14489	fuzzy	USPAT;	2001/03/19 13:30
				US-PGPUB;	
				ЕРО; ЈРО;	
				DERWENT;	
				IBM TDB	
	3	1	65/29.11.ccls. and fuzzy	USPAT;	2001/03/19 13:32
				US-PGPUB;	
}				ЕРО; ЛРО;	
				DERWENT;	
	_		, , , , ,	IBM TDB	
-	4	65502	c03b\$.ipc.	USPAT;	2001/03/19 13:33
-				US-PGPUB;	
-				ЕРО; ЛРО;	
				DERWENT;	
Ī	_			IBM TDB	
1	5	28	fuzzy and c03b\$.ipc.	USPAT;	2001/03/19 13:33
-				US-PGPUB;	
				EPO; JPO;	
				DERWENT;	
				IBM TDB	
	6	1	EP-976685-\$.DID.	DERWENT	2001/03/19 14:01
1	7	1132	glass adj furnace	USPAT	2001/03/19 14:09
1	8	2006	glass adj furnace	USPAT;	2001/03/19 14:09
				US-PGPUB;	
				EPO; JPO;	
				DERWENT;	
	_			IBM TDB	
	9	5	fuzzy and (glass adj furnace)	USPAT;	2001/03/19 14:10
				US-PGPUB;	
1			`	ЕРО; ЛРО;	
				DERWENT;	
		_		IBM TDB	
	10	3	(fuzzy and (glass adj furnace)) not ((fuzzy and c03b\$.ipc.) or	USPAT;	2001/03/19 14:10
			(65/29.11.ccls. and fuzzy))	US-PGPUB;	
				ЕРО; ЛРО;	
				DERWENT;	
L				IBM TDB	